



2003-2005 FORD EXPEDITION

#1318


1. Remove tow hooks. Once Grill Guard is in place, you can put tow hooks back on.
2. Place brackets inside Front Bumper as shown:

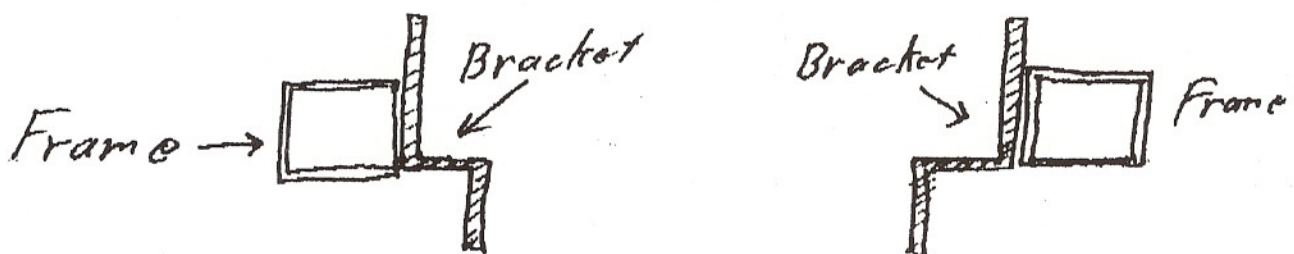



3. Bolt Brackets to box frame and to bumper bolt as shown AA & BB.

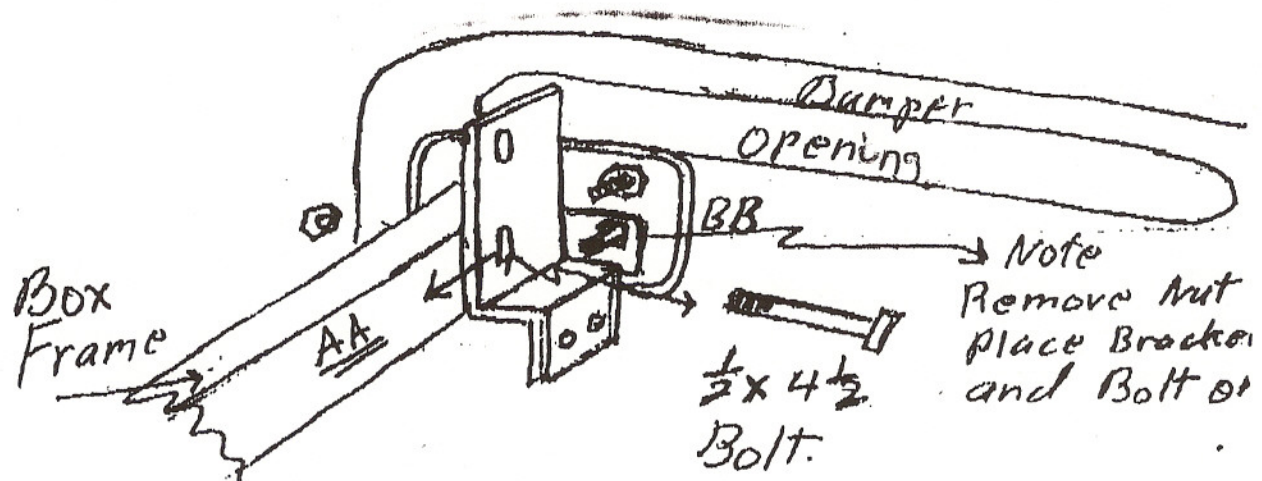

4. Once Grill Guard is bolted on to bottom bracket, place Strap to bracket and to the Grill Guard upright as shown.

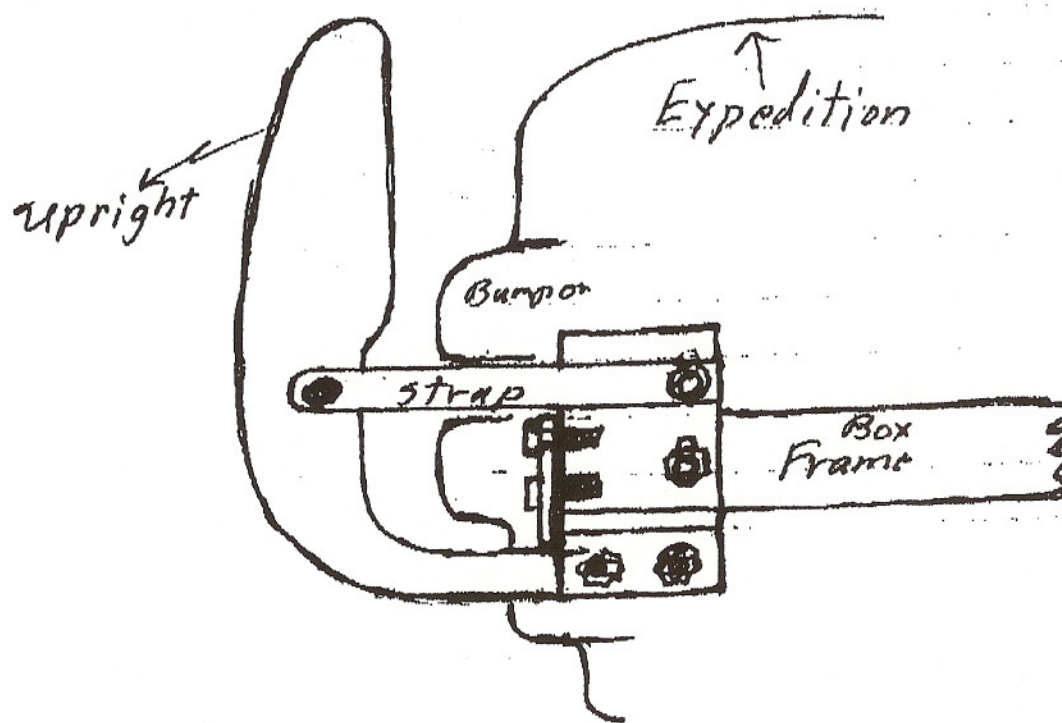

5.

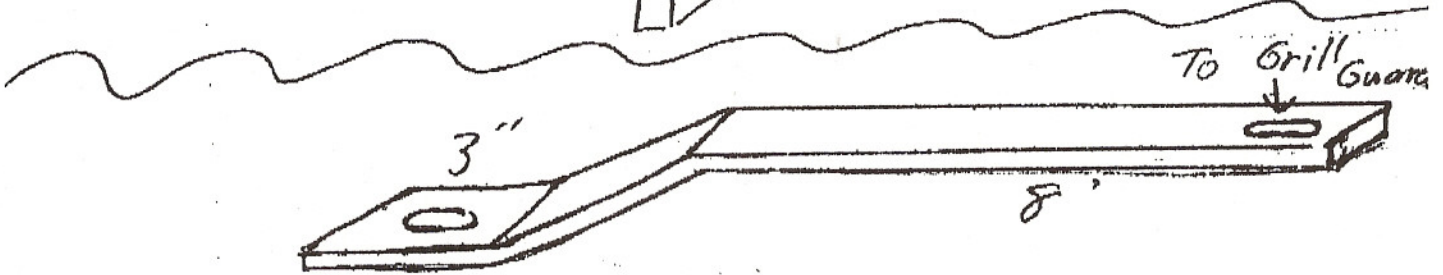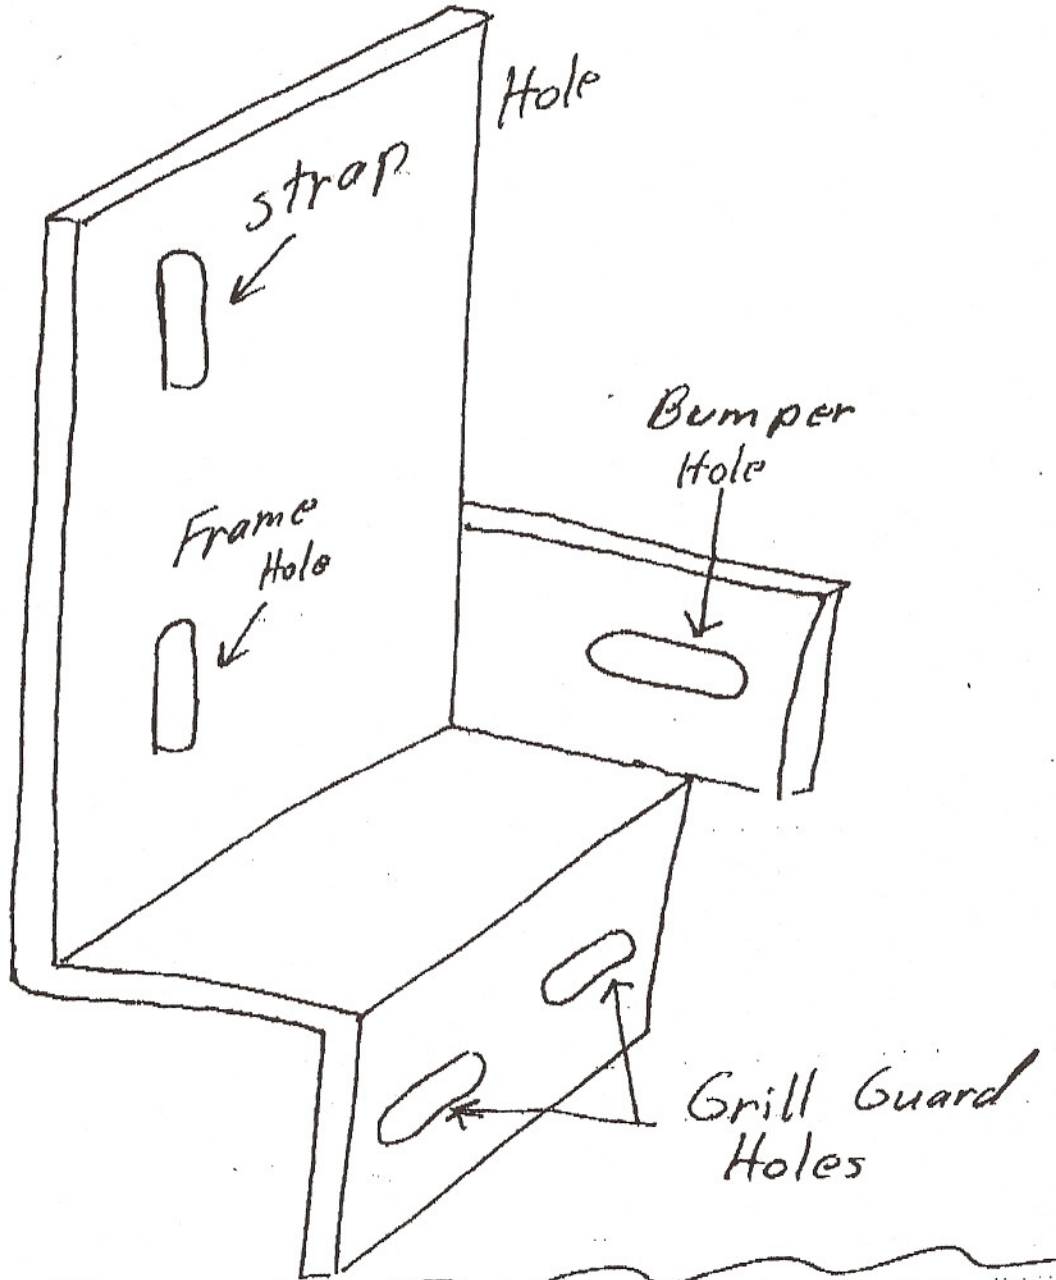

$\frac{3}{16} \times 1\frac{1}{2}$ Flat strap