


Page #

Ford 1330

How to install a 92-96 F150-92-98 F150

① First remove Front Bumper.

② Install Zee Brackets inside the Bumper as shown:

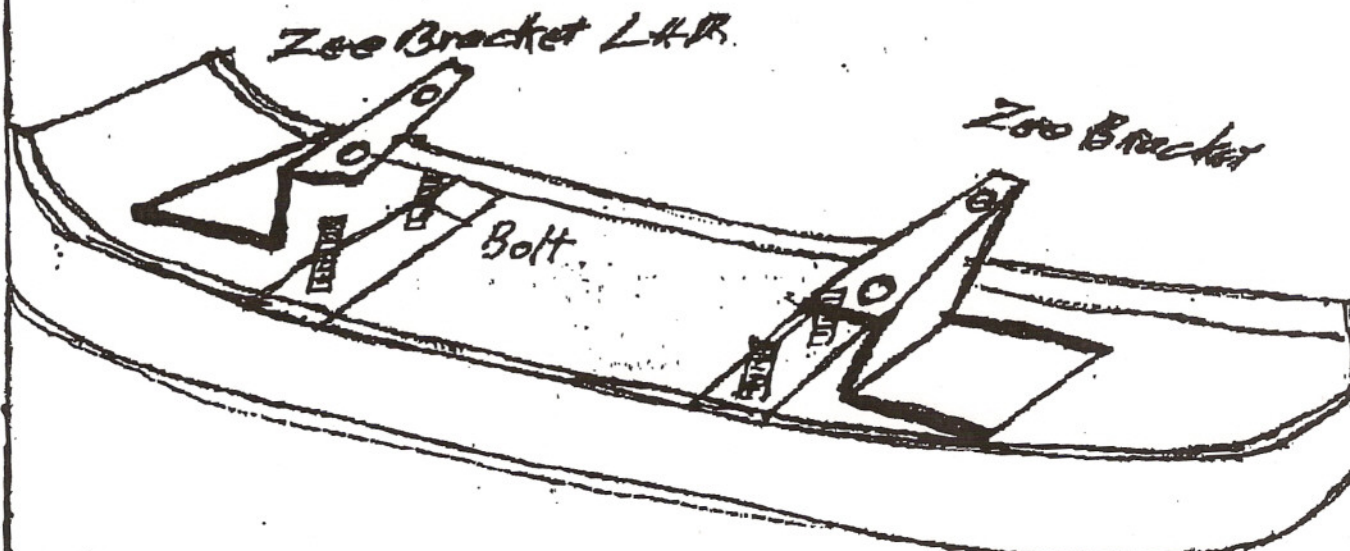



③ Bolt on Front Bumper w/ Brackets on to the Truck.

④ Place Grill Guard and center to the Front END. Mark Holes and Drill. then Bolt on Grill Guard. Bottom strap Bolt on to Frame with a angle Bracket.

Page II


92-96 F150 - 92-98 F250

5. Bottom strap Bolt on to Frame or with a Angle Bracket to Frame as shown:

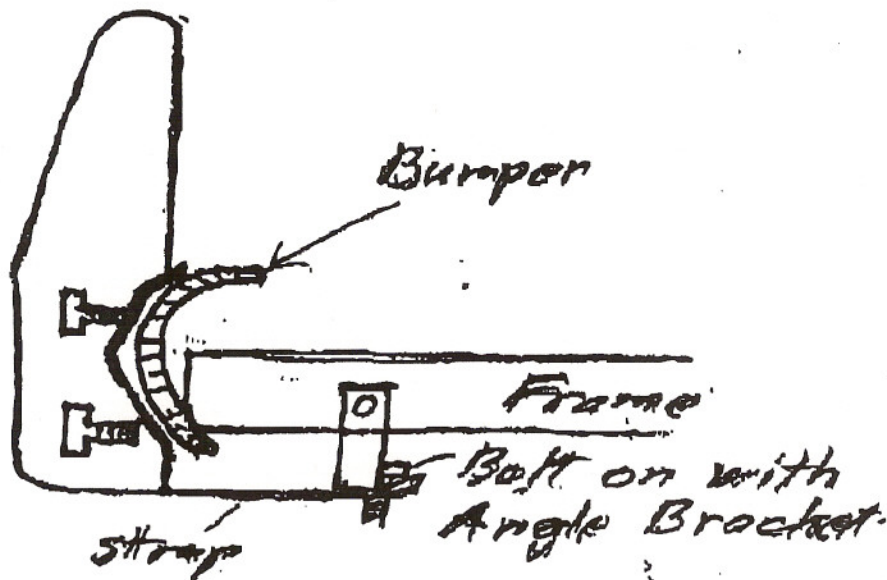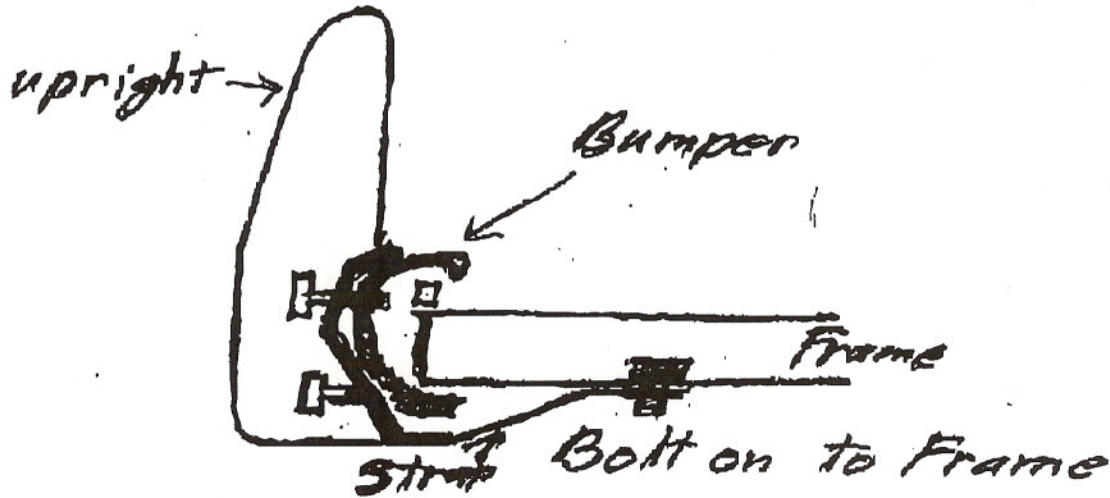


1330

96 Ford Wagon

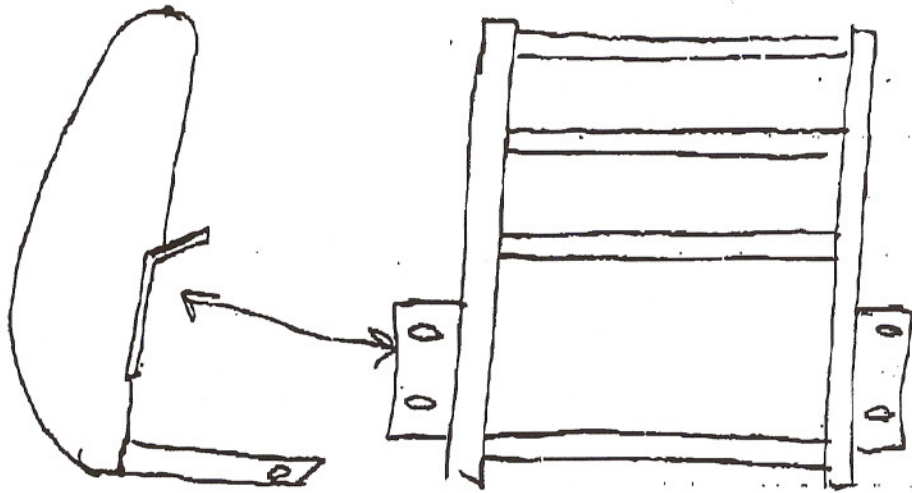

Bracket.

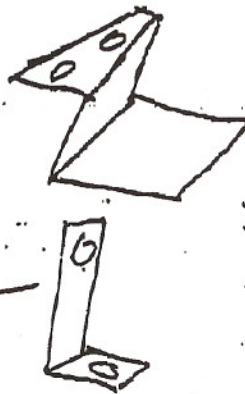

L+B

2-