



GAGE MOUNTING INSTRUCTIONS
FOR GAGE #2100,#2105,#2111,#2112,
#2160,#2161,
CHEVY & GMC FRONT END
REPLACEMENTS

1. Remove front end bumper with bracket.
2. Place front end replacement horns inside the box frame and also bolt replacement horn top strap to the top of the frame as shown:

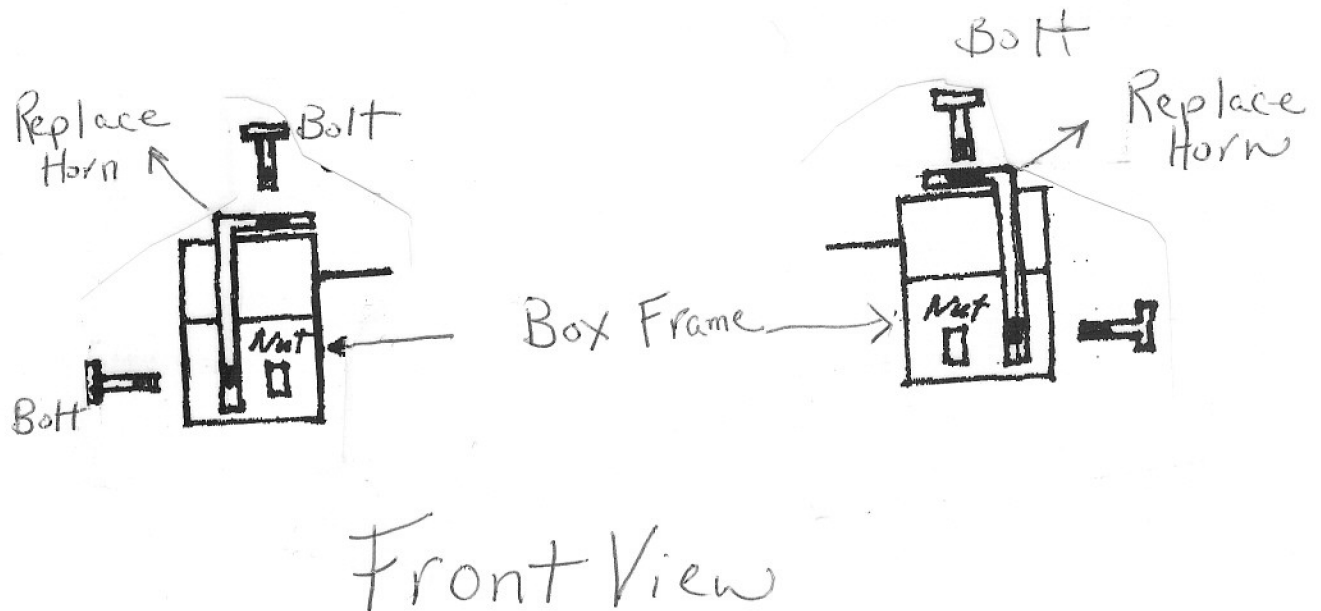

Chery + GMC

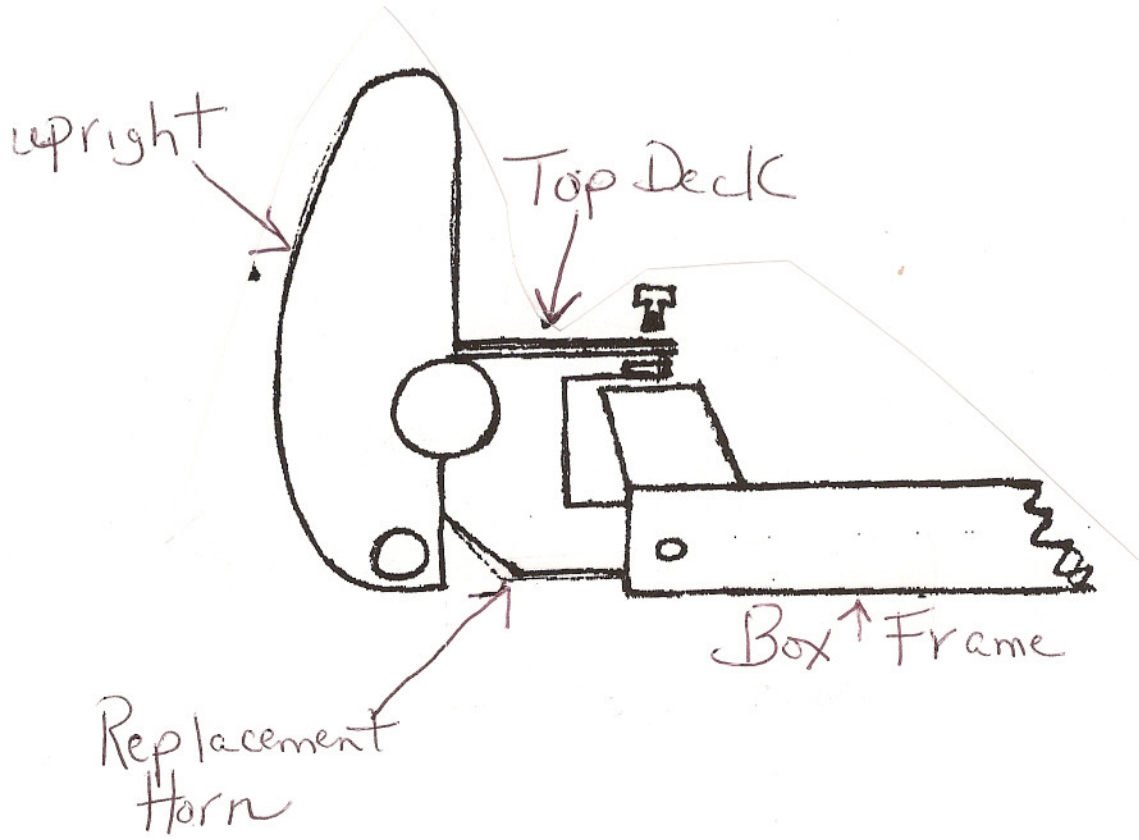

Side View